

The fuel storage is equiped with a damper that safely leads the fuel into the fuel storage.

Filling is regulated by a detecting element in the fuel storage.

When fuel level is below the detecting element the damper opens and the transport auger starts the filling proces.

After an preadjusted time the filling proces stops.

The fuel storage is equipped with a filler cover for inspection and manual filling.

The automatic filling system is suitable when using wood pellets, grains, wood chips, saw dust, wood shavings and more biofuels.

Twin Heat A/S • Nørrevangen 7 • 9631 Gedsted Tlf. 9864 5222 • Fax. 9864 5244 Mail: twinheat@twinheat.dk • www.twinheat.dk