
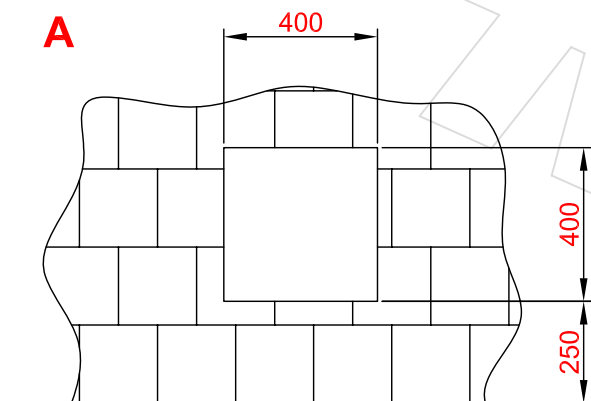


Concept of 500 and 700 L fuel storage placed in adjacent rooms

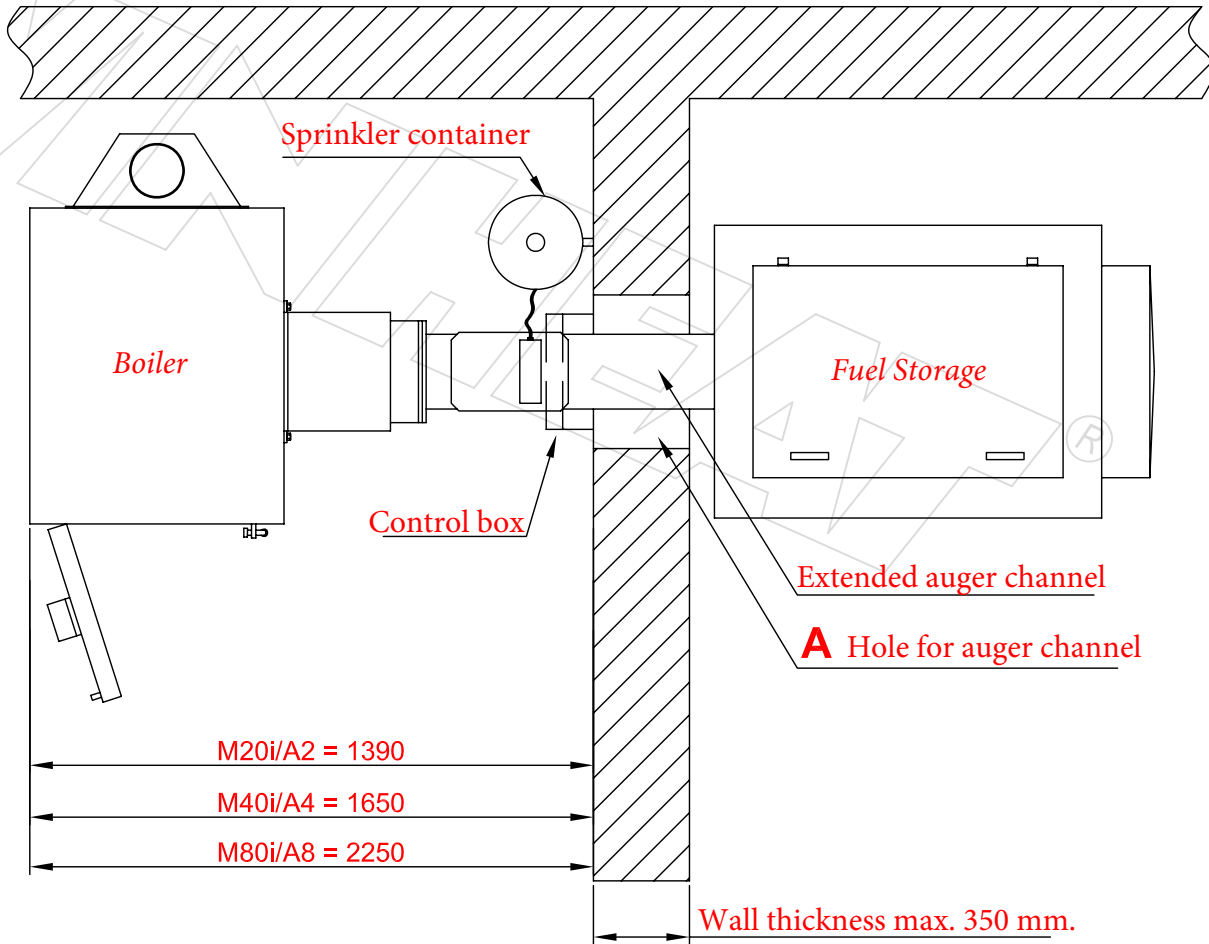

Note for extended auger channel

- The control box has to be installed on the wall in the boiler room above the auger channel
- The unattached sprinkler container has to be installed on the wall in the boiler room next to the auger channel
- The hole position for 300, 500 and 700 L fuel storage is the same